Module Connection







This indicates the communication connection for diagnosis function. Open communication of hardware as follow.

VCI II Connection



HOME Online	Vehicl	e Selection	VCI OFF	3					
Module Connection									
VCI	II.		TPMS						
Currently conr	ected VCI II		Ť						
 Select a VCI II for con 	nnection.		O F	lefresh					
VCI II			State						
Enter	VCI II Module : If VCI II is con	should be tur	rned on. gger Module or anot	her					
	To detecting s	et can not d ignal from V ls.	ctect VCI II signal. Cl II to tablet, It will t	ake					

Step2 Tap [Refresh] button.

Searching VCI II.

Refreshing List	+
Ple	ase Wait

HOME Online	Vehicl	e Selection	VCI OFF	🔁 🖂
	Module	Connectio	n	₽
VCI	0		TPMS	
Currently conr	ected VCI II		Í	ī
Select a VCI II for cor	nection.		Ń	Refresh
VCI II			State	
VCI_II_PP00	0094		Found	
	VCI II Module : If VCI II is contable, the tablet, the tablet To detecting s several second	should be tu nected to Tri let can not d ignal from V is.	rned on. gger Module or a etect VCI II signa CI II to tablet, It v	nother . rill take

Step3

Select VCI II Serial No. that requires to be connected on the list of "Select a VCI II for Connection"

Connection success message appears as below.



Номе о	Online	Vehicle S	election	VCI OF	•	58	
		Module Co			₽		
	VCI II						
_							
Cu	Bluetooth p	airing reques	st				
	To pair with: VCI_II_PP0000	0094					
• Select a \	Enter that devic	e's PIN:) Refre	esh	
	(Try 0000 or 1234)						
	PIN containin	g letters or symbols					
	Enter PIN on ot	her device as we	1				
>	Can	cel	ОК				
		l II Module sh	ould be turn	ed on			
\odot	lf V	CI II is conne	cted to Trigg	er Module or a	nother		
	tab	let, the tablet	can not dete	ect VCI II signa	I. 		
	1	2	3				
	4	5	6	Done			
	7	8	9				
		0					

Step4

The pop-up message appears as shown.



Enter [0701] in the box. Tap [OK] button.

Due to the security policy, the PIN will be changed regularly.

User can check the PIN from GSW Notice.



Notice

- When connecting VCI II and Tablet fails via Wi-Fi Direct, the pop-up message appears as below.
- ☞ OK : Try again.



HOME Online Vehicle Selection Vcl \$ 😓 🖂	Step5
Module Connection VCI II TPMS	Check VCI II connection in the box of "Currently connected VCI II".
Currently connected VCI II 💲 VCI_II_PP000094 💼	
	Connection Icon
Select a VCI II for connection. VCI II VCI II State	Wi-Fi Direct
VCI_II_PP000094 Using	Bluetooth
>	
 VCI II Module should be turned on. If VCI II is connected to Trigger Module or another tablet, the tablet can not detect VCI II signal. To detecting signal from VCI II to tablet, It will take several seconds. 	
	ting

VCI II LED Color meaning tips ≫



VCI II is powered on but has not yet connected to the tablet. (For first time set up or if VCI II fails to communicate, go to Configuration>Module Connections to setup VCI II connection)



VCI II is connected to the tablet and communication with the vehicle.



VCI II has lost communication. Disconnect the VCI II from the OBDII connector and reconnect.



VCI II is in performing an ECU Upgrade.



Blue

VCI II is in Flight Record mode. The VCI II is only communicating with the Trigger Module, not the tablet. (To resume communication with the tablet, disconnect the Trigger Module from power outlet)

♦ VCI II USB Connection

It describes how to connect VCI II to KDS tablet PC by USB Cable.

• Components

- Tablet PC
- OTG(On The Go) Cable
- VCI IÌ USB Cable (P/N : G1XDDCA002)
- VCI II (P/N : G1XDDMN001)



VCI Connection

VCI USB Connection

It describes how to connect VCI to KDS tablet PC by USB Cable.

- Components
- Tablet PC
- OTG(On The Go) Cable
- USB to USB Mini Cable(P/N : G1XDDCA007)
- DLC Cable
- VCI



VCI II and Trigger Module Connection

VCI II and Trigger Module must be paired to transfer and save the data for Flight Record function from the vehicle to VCI II module. They are paired by Bluetooth communication system and must be set up as shown below.

Preparing



Notice

- VCI II must be connected to OBD-II connector on the vehicle and VCI II should turn on.
- When the trigger module is connected to the Cigar Lighter Socket, the VCI II power is turned on automatically and it searches VCI II and connects it.

] Caution

- VCI II must be connected to the OBD-II connector on the vehicle. (Power on)
- When the trigger module is connected to the Cigar Lighter Socket, the VCI II power is turned on automatically and it searches VCI II and connects it.



Notice



TPMS B/T Module Connection

For TPMS B/T module connection, Bluetooth adaptor should be connected to TPMS module.



Step1				
Tap [Refr	esh] button.			
Searching	g TPMS			
	Refreshing List		2	
		Please Wai	t	
				-



Step2

Select the Serial No. of TPMS module on the TPMS B/T list to connect.

A	HOME Online CARENS/RONDO/2015/D 1.7 TCL. VCI 🛛 🐯 🔛							98		
	Module Connection 🕹									
	VCI II TPMS									
_										
	Curre	ntly paired T	PMS BT Adap	oter				Ē		
• 5	Select a	TPMS BT A	dapter for pai	ring.	et			رب Re	fresh	
		Biueto		leque	51					
		To pair TPMS	with: BT_PP00002	4						
		Enter t	hat device's P	'IN:						
		(Try 0000	or 1234)					- H		
		Enter F	N containing PIN on other d	etters evice a	or syml s well.	bols				
	- 10		Cancel			OH	<	lapto	er.	
	1746		becomes	s Paire	eu anu	n mean	s reau	y tor using	TPMS.	
P		1				_	_	_		
		1	2	1	3					
		4	5	(5	Done	2			
		7	8	(9					
			0]			

Step3

The pop-up message appears as shown.



Enter [0000] in the box.



Ħ	HOME	Online	CARENS/RONI	00/2015/D 1.7 TCI		vci \Theta 😽	3-3
			Module	Connection			₽
1			VCI II		TPMS	6	
	Curre	ntly nai	red TRMS RT Adapter	TDMS BT DE	200002/		
	Curre	nuy pa		* TFM3_D1_FF	00002-		
•	Select a	TPMS	BT Adapter for pairing	ŀ.		O Refr	esh
		TPMS	BT Adapter		State		
		TPMS_E	3T_PP000024		Paired		
			 Combine a 1 Turn the TPI After pairing becomes Pri 	'PMS Module an MS Module on. , the state of TPI aired' and it mean	d Bluet MS BT is read	ooth Adapter Adapter y for using Ti	PMS.

Step4

After pairing, check the paired TPMS Adaptor Serial No. in the "Currently paired TPMS BT Adaptor" section.